


RAISING WIPERS TO THE SERVICE MODE

MY 16-21 RX | MY 19-21 ES | MY 18-21 LS | MY 18-21 LC | MY 18-21 UX

On the above models, when the windshield wipers are not being used, they retract below the hood. To enable the windshield wipers to be lifted when parking in cold conditions, preparing for wintery weather, or for replacing a wiper insert, change the rest position of the windshield wipers to the service position using the wiper lever.

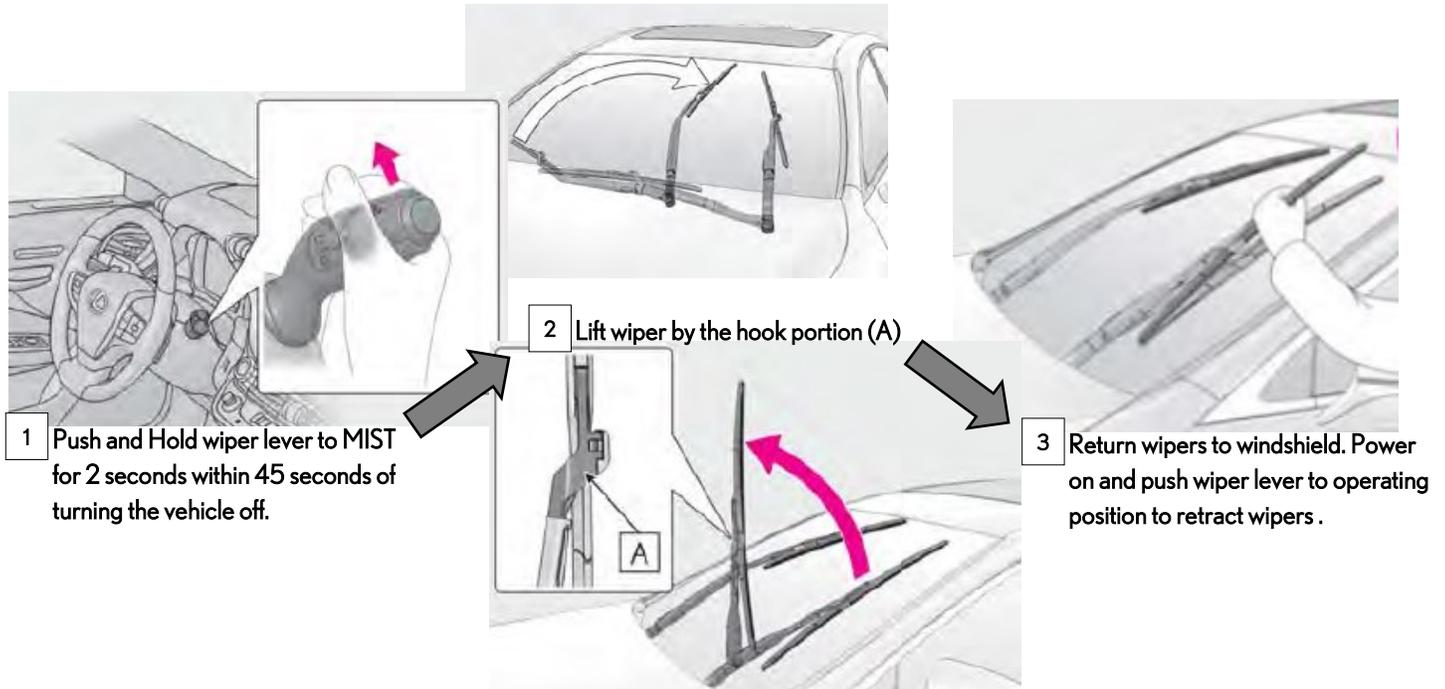

1 | Raising the wipers to the service position

Within approximately 45 seconds of turning the engine switch off, move the wiper lever to MIST position and hold for approximately 2 seconds or more. The wipers will move to the service position.

2 | Lifting the windshield wipers

While holding the hook portion (A) of the wiper arm, lift the windshield wiper from the windshield.

3 | Lowering the windshield wipers to the retracted position

Be sure the windshield wipers are placed back on the windshield before turning the vehicle on. Turn the engine switch to IGNITION ON mode and then move the wiper lever to an operating position. The windshield wipers will return to the retracted rest position.

IMPORTANT:

- Do not lift the windshield wipers when they are in the retracted position below the hood. Otherwise, they may contact the hood, possibly resulting in damage to a windshield wiper and/or the hood.
- Do not lift a windshield wiper by the wiper blade. Otherwise, the wiper blade may be deformed.
- Do not operate the wiper lever when the windshield wipers are lifted. Otherwise, the windshield wipers may contact the hood, possibly resulting in damage to the windshield wipers and/or hood.